


Window Handles


Measuring Window Handles

1. Identify the Type of Handle

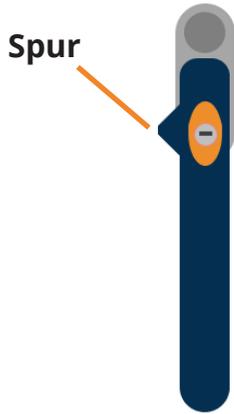


Cockspur

Does not have a spindle but a spur that sits on top of a wedge. Available in left or right hand.


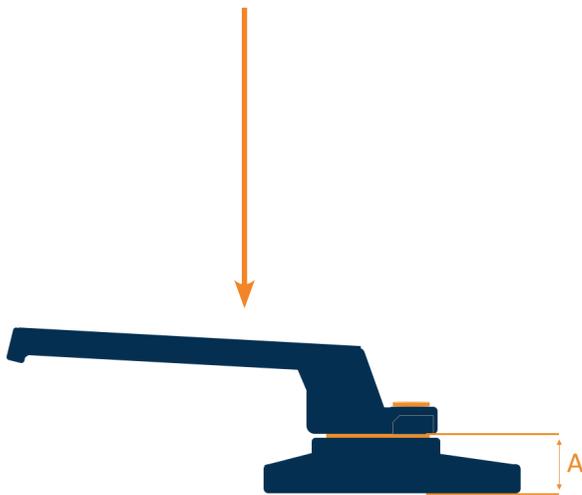


The most important measurement to take on a cockspur handle is the 'stack height'. This is the distance between the base of the handle and the underside of the spur (A).

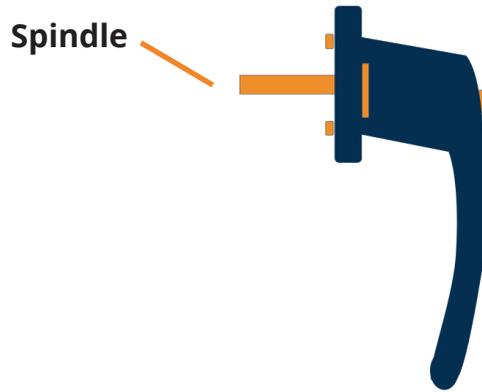

Espag

Will feature a spindle at the back and can be either handed (offset) or universal (inline).

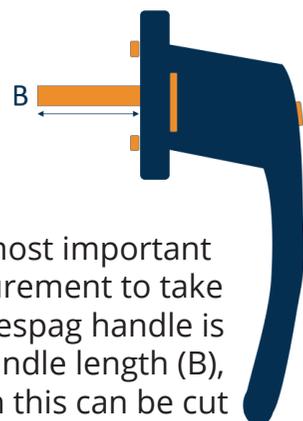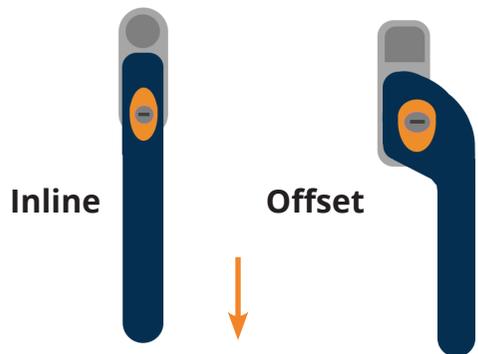

The most important measurement to take on an espag handle is the spindle length (B), though this can be cut down.