


Multipoint Locks

Measuring a Multipoint Door

1. Take the central lockcase measurements:

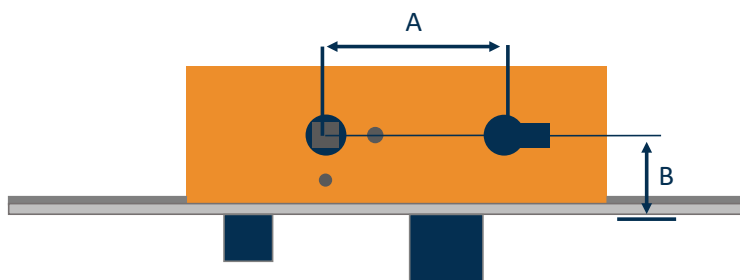


A: PZ

Measure from the centre of the spindle hole to the centre of the round section of the euro cut-out. This size is called the PZ.

B. Backset

Measure from the outer edge of the track to the centre line of the spindle and euro cut-out.

2. Take hook/roller measurements

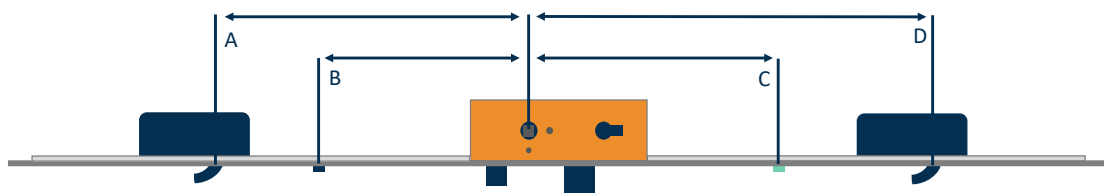

There could be any combination of roller cams and hook boxes, the above example shows two hooks and two rollers.

When measuring hook/deadbolt and roller positions, start at the top of the lock and measure each size to the centre of the spindle hole. In the case of a twin spindle measure to the top spindle hole.